


SIP to all devices, PCs and clients on the LAN

Written by Administrator

Tuesday, 24 March 2009 09:02 -

You've Got an Account from a SIP Service Provider

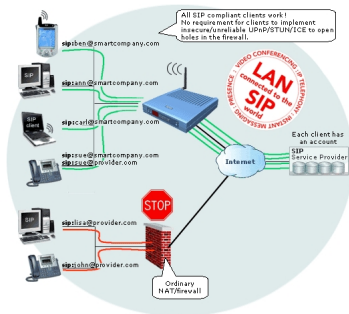

- Use any services from the provider on your LAN
- Use multiple SIP clients on your broadband connection
- The Internet Gate is SIP transparent by default

What are the steps to get there?

1. The Internet Gate is SIP transparent by default.
(In the GUI you'll find).
2. Just connect your SIP client behind the Internet Gate and restart it. [Learn more]

Note!

- Turn off any tricks in the clients that may try to open NATs and firewalls, such as STUN and UPnP. The Internet Gate is already SIP transparent in a proper and secure way.